



Foreword

This Instruction Manual and its corresponding supplements should be read carefully to familiarise yourself with your vehicle.

Besides the regular care and maintenance of the vehicle, its correct handling will help preserve its value.

For safety reasons, note the information concerning accessories, modifications and part replacements.

If selling the vehicle, give all of the on-board documentation to the new owner, as it should be kept with the vehicle.

Contents

Manual structure	3
Communications system	4
Introduction	4
Mobile phone system with voice control function: Altea / Altea XL / Altea Freetrack / Leon	5
Telephone Menu: Altea / Altea XL / Altea Freetrack / Leon	9
Mobile phone system with voice control function: Ibiza / Ibiza SC / Ibiza ST	13
Voice control: All models	16
Index	18

Manual structure

What you should know before reading this manual

This manual contains a description of the **equipment** supplied with the vehicle at the time of press. Some of the equipment hereunder described will not be available until a later date, or is only available in certain markets.

Because this is a general manual, some of the equipment and functions that are described in this manual are not included in all types or variants of the model or model year; they may vary or be modified depending on the technical requirements and on the market or model year; this can not be interpreted as dishonest advertising.

The **illustrations** are intended as a general guide and may vary from the equipment fitted in your vehicle in some details.

The texts shown in this manual for describing the **Telephone** menu on the instrument panel, and the orders for the voice control, may vary depending upon the vehicle: they should be taken as descriptions of the function rather than the precise text.

The **direction indications** (left, right, front, rear) appearing in this manual refer to the normal forward working direction of the vehicle except when otherwise indicated.

The equipment marked with an asterisk** is fitted as standard only in certain versions, and is only supplied as optional extras for some versions, or are only offered in certain countries.

© All registered marks are indicated with ®. Although the copyright symbol does not appear, it is a copyrighted mark.

► Indicates that the section is continued on the following page.

■ Indicates the **end of a section**.



Caution

Texts with this symbol draw your attention to potential sources of damage to your vehicle.



For the sake of the environment

Texts preceded by this symbol contain additional information on the protection of the environment.



Note

Texts preceded by this symbol contain additional information. ■



WARNING

Texts preceded by this symbol contain information on safety. They warn you about possible dangers of accident or injury.

Communications system

Introduction

This system allows you to connect your mobile phone to the vehicle and to use the hands-free mode.

The hands-free device means that the telephone can be used inside the vehicle; the driver will not have to remove their hands from the steering wheel nor will be distracted from traffic.

Available functions include making calls in hands-free mode, access to the mobile phone address book and control of the voice recognition system.

The mobile phone communication system is activated when the ignition is switched on. It switches off when the key is removed from the ignition.

Before using the communication system, the mobile phone should be connected to the vehicle installation via Bluetooth ⇒ page 6.



WARNING

- Please concentrate on driving. As the driver, you have the responsibility for your safety and that of others. For this reason, you should only use the functions when the traffic situation allows so and in a manner that allows you to maintain control of the vehicle. Otherwise, you run the risk of causing an accident.
- The speech system must not be used in cases of emergency, since the voice changes in stressful situations. This could result in a failed or delayed telephone connection. Always dial emergency numbers manually!
- Always observe applicable legislation.
- Adjust the volume so that external warning sounds (e.g. emergency vehicles) are always audible.



Note

- The voice control system is only available in the following languages: Spanish, German, English, French, Italian, Portuguese, Czech, Russian and Dutch. For other languages, the predefined language for the voice control instructions is English. Please take the vehicle to a Technical Service if you wish to change the language.
- There are certain versions of mobile phone software that contain errors. These errors may give rise to faulty operation of the vehicle hands-free system. In this case, update the software for your mobile phone or consult your mobile phone technical service.
- Some mobile devices do not respond correctly to the orders of the keypad in hands-free mode. Always use the vehicle controls to interact with the mobile phone.
- With some models of phone, some functions may not be available with the SEAT mobile phone system. If you have any queries, please refer to the information regarding the compatibility of your mobile phone with the SEAT telephone system. ■

Mobile phone system with voice control function: Altea / Altea XL / Altea Freetrack / Leon

Control elements

The mobile phone system can be controlled using the steering wheel controls, via the **Telephone** menu on the instrument panel or via the voice control system.

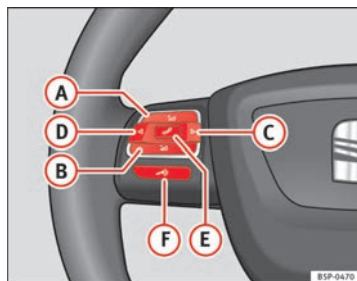


Fig. 1 Controls on the steering wheel

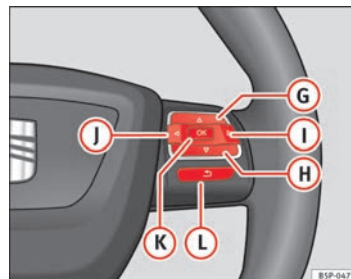


Fig. 2 Steering wheel controls, depending on model version

Button	Function
F	Short press: start or cancel voice control.
K	Short press: Confirm telephone menu selection.
G / H	Short press: select number/letter. Select an element from the telephone menu.
J / I	Short press: Change menu.
A / B	Short press: Adjust volume of telephone function.
E	Short press: Answer, Start, End a call. Long press: Reject a call. During a call, switch between normal mode and "private" mode

Push To Talk (PTT) button

The voice control system can be activated by the "Push To Talk" button or "PTT" (F) located on the multifunction steering wheel → fig. 1.

If this button is pushed during voice control, the instructions are interrupted to allow you to speak. ■

Connecting the mobile phone before using for the first time

Each telephone must be connected to the SEAT mobile phone system before using it for the first time.

When connecting a mobile phone for the first time, you will be asked to create a user profile. A user profile is necessary for you to connect the mobile phone to the SEAT system. Once the user profile has been created, your telephone can be connected automatically or manually ⇒ page 7, "Linking a connected mobile phone to the SEAT telephone system". It is not necessary to repeat the initial connection process each time. The phone will be connected automatically as long as the corresponding user profile has not been deleted using the telephone menu or the **Factory settings** function.

A maximum of four user profiles can be created. If you try to create a fifth profile, the profile which has been inactive for the most time will automatically be deleted.

The connection process may take several minutes.

The procedure for connecting your mobile phone to the SEAT system for the first time is described below. The procedure can be started from the vehicle system using the **Telephone** menu on the instrument panel or from the mobile phone. Both methods are described below ⇒ page 6 and ⇒ page 7. ■

Connecting the mobile phone to the vehicle system by searching for Bluetooth devices from the Telephone menu on the instrument panel

Activating the system's Bluetooth visibility

- Activate the system's Bluetooth visibility by switching on the ignition or using the options in the **Telephone** menu ⇒ page 9 or via voice control ⇒ page 16.
- The vehicle system will be visible to the mobile phone via Bluetooth for 3 minutes.
- Switch on the Bluetooth function on your mobile.

Searching for Bluetooth devices

- Select the telephone menu on the instrument panel display
- Select the function **Search for Telephones** to search for Bluetooth devices within the range of the system. At the end of the search, a list of the devices found is displayed.

Connecting the mobile phone

- Select the required telephone from the list on the instrument panel display.
- Next, accept the connection instructions on the mobile phone.
- When asked to do so, enter the PIN shown on the instrument panel display in the mobile and confirm.
- Confirm the instructions for connection on the mobile.
- Confirm the message on the instrument panel that says a new profile has been created.
- The contacts in your mobile phone address book are copied to the vehicle system.
- The connection is complete. ▶

**Note**

The Bluetooth visibility of the vehicle system is switched on for three minutes when the ignition is switched on with the key. After three minutes, if you want to reactivate the visibility (for example while driving), you can do so by using the menus on the instrument panel ⇒ page 9 or by voice control ⇒ page 16. ■

Connecting the mobile phone to the vehicle system by searching for Bluetooth devices from the mobile phone

Activating the system's Bluetooth visibility

- Activate the system's Bluetooth visibility by switching on the ignition or using the options in the **Telephone** menu ⇒ page 9 or via voice control ⇒ page 16.
- The vehicle system will be visible to the mobile phone via Bluetooth for 3 minutes.

Searching for Bluetooth devices

- Searching for Bluetooth devices using the mobile phone.

Connecting the mobile phone

- Select the device SEAT_BT from the mobile phone list of search results.
- Next, accept the connection instructions on the mobile phone.
- When asked to do so, enter the PIN number 1234 and confirm.
- The contacts in your mobile phone address book are copied to the vehicle system.
- The connection is complete.

**Note**

The Bluetooth visibility of the vehicle system is switched on for three minutes when the ignition is switched on with the key. After three minutes, if you want to reactivate the visibility (for example while driving), you can do so by using the menus on the instrument panel ⇒ page 9 or by voice control ⇒ page 16. ■

Linking a connected mobile phone to the SEAT telephone system

When the telephone has been connected and the corresponding user profile created, your telephone will automatically link up with the SEAT telephone system under the following conditions:

- The mobile phone is switched on and the Bluetooth function activated.
- The vehicle system's Bluetooth visibility is on.






**Note**

The Bluetooth visibility of the vehicle system is switched on for three minutes when the ignition is switched on with the key. After three minutes, if you want to reactivate the visibility (for example while driving), you can do so by using the menus on the instrument panel ⇒ page 9 or by voice control ⇒ page 16. ■

Functions during a call

Making, answering, rejecting or ending a call:

 


	Telephone menu	The multifunction steering wheel
Selecting a contact	Use the telephone menu address book to select the person you wish to contact.	Use the telephone menu address book to select the person you wish to contact.
Starting a call	Select the "Call" function from the menu	Press button  or  .
Answering a call	Select the "Answer" function from the menu	Press button  .
Rejecting a call	Select the "Reject" function from the menu	Press button  for at least 2 seconds.
Ending a call	Select the "End call" function from the menu	Press button  .

The telephone menu allows the use of additional functions during a call. Some functions (e.g. Conference) are only available if the network and/or mobile phone allow them.

When you are making a call, the following actions are possible:

Function	Description
End call	End a telephone call.
Hold	Place the active call on hold in order to make a second call.
Conference calling	Launch a conference call between the active call and the on-hold call.

Private call	Switch the active call to the mobile phone so that passengers cannot hear the conversation. The call can be switched back to normal mode by using the hands-free option displayed on the menu. It is also possible to switch from one mode to the other by pressing button  .
Microphone Off	Switch off the vehicle microphone. It can be reactivated via the menu option "Connect microphone".
DTMF	Send tones corresponding to the telephone keys (Dual Tone Multiple Frequency) to control answer phone type automatic services, etc.

Telephone Menu

⇒ page 9, "Telephone Menu: Altea / Altea XL / Altea Freetrack / Leon". ■

Voice control

⇒ page 16, "Voice control: All models". ■

Telephone Menu: Altea / Altea XL / Altea Freetrack / Leon

Introduction



Fig. 3 Agenda menu depending on version

In vehicles which display the menu on the instrument panel, the mobile phone settings can be changed using the telephone menu.

WARNING

All changes to the settings to get the mobile phone ready for use and to perform the functions should be carried out while the vehicle is stationary to avoid the risk of accident and injuries.



Note

- Some functions on the telephone menu are only available when a mobile phone is connected. The instructions given by the phone and/or accessory manufacturers should be observed.
- The text displayed on the instrument panel may vary slightly from the texts shown below. This does not affect the working of the system. ■

Summary of the menu structure

Select the **Telephone** option from the main menu. The following menu options can be consulted:

On-screen	Function
Main telephone screen	Displays the name of the user, the network operator and the strength of the signal ⇒ page 10.
Phone book	Access to a copy of the mobile phone address book ⇒ page 10. The telephone entries on the SIM card or on the mobile phone internal memory, or both, are copied. ^{a)}
Dial number	Entering a phone number to make a call.
Call lists	This displays a list of the recently dialled numbers, missed calls and calls received ⇒ page 11. In addition, the entries downloaded from the connected mobile phone are shown at the start of the lists. ^{a)}



Voice Mailbox	Select the voice mailbox to listen to saved messages ⇒ page 11. The voice mailbox settings depend on the network operator.
Bluetooth	Configuration of user profile and Bluetooth functions ⇒ page 12.
Settings	Basic settings to get the mobile phone ready ⇒ page 12.

a) Depending on the mobile phone.

Structure of the telephone menu

Main telephone screen ⇒ page 10

Phone book ⇒ page 10

Dial number

Call lists ⇒ page 11

- Missed calls
- Received calls
- Recent calls

Voice Mailbox ⇒ page 11

Bluetooth ⇒ page 12

- Users
 - Connect
 - Disconnect
 - Rename
 - Delete
 - New user
 - Display
 - Name of telephone
- Settings ⇒ page 12
- Phone book
 - Update

- Classification

- Call tone
- Return - *return to telephone main display*




 

 
Telephone main menu

A variety of information regarding the status of the mobile phone is displayed on the **telephone main display**:

- the status of the telephone battery charge,
- the telephone network cover and
- the Bluetooth visibility of the vehicle system. ■

Address Book Menu

The address book shown is a copy of the mobile phone address book.

Function	Procedure
Making a call using an entry in the address book	<p>- In the Telephone menu, select the option Address Book.</p> <p>- Using the buttons  and , select the required entry from the address book. Hold down the buttons to scroll through the address book in alphabetical order.</p> <p>- Select the required number (: mobile, : work, : private, : general no.).</p> <p>- Confirm selection, or select the option Call. The call will be connected.</p>

Recording a name for the voice control	<p><i>Valid if the mobile phone configuration has voice control:</i></p> <ul style="list-style-type: none"> - When storing a name, make sure that there are no external sounds which may interfere with the recording. Up to a maximum of 15 names can be stored. - From the Address Book menu, select an entry. - Select Name of call. - Select Record and wait for the audible signal. Next, say the name you wish to allocate to the entry for use with the voice control function. When asked to do so, repeat the name. The recording stops automatically and the system replays the entry.
Play or restore the call name for voice control	<p><i>Valid if the mobile phone configuration has voice control:</i></p> <ul style="list-style-type: none"> - From the Address Book menu, select an entry. - Select Name of call. - Select and confirm Play, or Restore.
Updating the mobile phone address book^{a)}	<p>To update the copy, you can copy the address book from the mobile phone manually, or from the SIM card to the memory of the mobile phone device^{a)} ⇒ page 12.</p>

^{a)} Depending on the mobile phone.

Call List menu

In the **Call list** menu, it is possible to view the list of all recently dialled numbers, of the missed calls and of the calls received. The length and sequence of the lists will depend on the mobile phone.

- Select a list.
- Select an entry from the list.

- Press button **E** ⇒ page 5, fig. 1 on the multifunction steering wheel to establish the call.

Function	Description
Missed calls	The numbers of the most recent unanswered calls are displayed.
Received calls	The numbers of the most recent answered calls are displayed.
Recent calls	The numbers of the most recent calls are displayed.
	In the main telephone menu, when button E ⇒ page 5, fig. 1 on the multifunction steering wheel is pressed, you are taken directly to the recent call list.

Voice Mailbox menu

Consult voicemail messages

Use the Voice mailbox menu to listen to the messages which have been left in the voice mailbox.

- The first time this menu option is used, the mobile phone device will search the address book for the voicemail number. It searches for key words, such as "voice mailbox", "mailbox", or even "Automatic answer phone".
- If a suitable entry is not found, enter the voice mailbox number manually. ■

Bluetooth menu

Function	Description
Users	Connect or disconnect already defined users, rename or delete user profiles. When changing the user, the system may need to perform connection consultations in the mobile phone and the PIN code must be entered in the instrument panel display.
New user	Select New user so that the device starts to search for Bluetooth compatible mobile phones. If you try to connect an "unknown" mobile phone, the system will check whether you have already created four user profiles. As it is only possible to store up to a maximum of four user profiles, it may be necessary to delete a profile.
Display	The "visibility" of the device for mobile phones must be connected in order to connect to a mobile phone. When the device is "visible", a symbol is displayed on the main screen of the telephone ⇒ page 10, and is automatically switched off after three minutes. It is only possible to connect a mobile phone if there are no other mobile phones connected to the device.
Name of telephone	You can allocate a name to the mobile phone device. When the device is on, this name is displayed on other Bluetooth devices during the search for devices. The name stored by default is SEAT_BT .



Note

If you intend to sell the vehicle, to protect the data, delete the "user profile" in the **User** menu, or take the vehicle to a SEAT dealer. ■

Settings menu

Function	Description				
Phone book	After successfully establishing a connection, the telephone entries of the SIM card and the mobile phone address book ^{a)} are automatically loaded into the memory of the device for mobile phones. <table border="1"> <tr> <td>Updating</td><td>Transfer any modifications to the mobile phone address book to the vehicle address book after the connection has been established.^{a)}</td></tr> <tr> <td>Classification</td><td>Classification of entries by surname or first name.^{a)}</td></tr> </table>	Updating	Transfer any modifications to the mobile phone address book to the vehicle address book after the connection has been established. ^{a)}	Classification	Classification of entries by surname or first name . ^{a)}
Updating	Transfer any modifications to the mobile phone address book to the vehicle address book after the connection has been established. ^{a)}				
Classification	Classification of entries by surname or first name . ^{a)}				
Call tone	A selection of different call tones are available. Select a tone to listen to it. Confirm the selection on the multifunction steering wheel using button (K) ⇒ page 5, fig. 2 to accept the selected call tone. ■				

^{a)} Depending on the mobile phone.

Mobile phone system with voice control function: Ibiza / Ibiza SC / Ibiza ST

Control elements

The mobile phone system can be controlled from the multifunction control or by using the voice control system.

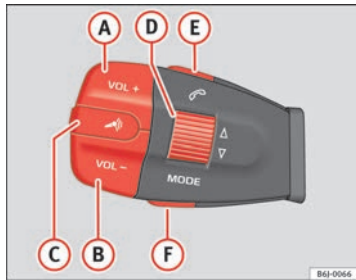


Fig. 4 Talk button on the multifunction control

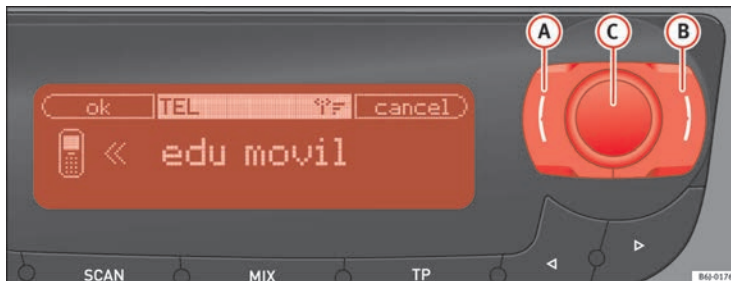








Fig. 5 Incoming call on the radio screen.


Controls on the multifunction control

Button	Function
	Short press: start or cancel voice control.
 / 	Short press: Adjust volume of telephone function.
	Short press: Answer, Start, End a call. Long press: Reject a call. During a call, switch between normal mode and "private" mode.

Radio controls

Button	Function during an incoming call which has not yet been answered	Function during an active call
	Answer the call	Set the microphone to mute
	Reject the call	End call

Push To Talk (PTT) button

The voice control system can be activated by the "Push to talk" or "PTT" button  ⇒ page 13, fig. 4.

If this button is pushed during voice control, the instructions are interrupted to allow you to speak. ■

Connecting the mobile phone before using for the first time

Each telephone must be connected to the SEAT mobile phone system before using it for the first time.

When connecting a mobile phone for the first time, you will be asked to create a user profile. A user profile is necessary for you to connect the mobile phone

to the SEAT system. Once the user profile has been created, your telephone can be connected automatically or manually ⇒ page 15, "Linking a connected mobile phone to the SEAT telephone system". It is not necessary to repeat the initial connection process each time. The phone will be connected automatically as long as the corresponding user profile has not been deleted using the **Factory settings** function.

A maximum of four user profiles can be created. If you try to create a fifth profile, the profile which has been inactive for the most time will automatically be deleted.

The connection process may take several minutes.

The procedure for connecting your mobile phone to the SEAT system for the first time is described below. The procedure is started from the mobile phone as described below ⇒ page 14, "Connect the mobile phone to the vehicle system". ■

Connect the mobile phone to the vehicle system

Activating the system's Bluetooth visibility

- Activate the Bluetooth visibility of the system by switching on the ignition or by voice control ⇒ page 16.
- The vehicle system will be visible to the mobile phone via Bluetooth for 3 minutes.

Searching for Bluetooth devices

- Search for Bluetooth devices using the mobile phone.

Connecting the mobile phone

- Select the device SEAT_BT from the mobile phone list of search results.
- Next, accept the connection instructions on the mobile phone.
- When asked to do so, enter the PIN number 1234 and confirm. ►

- The contacts in your mobile phone address book are copied to the vehicle system.
- The connection is complete.



Note

The Bluetooth visibility of the vehicle system is switched on for three minutes when the ignition is switched on with the key. After three minutes, if you want to reactivate the visibility (for example while driving), you can do so with the voice control ⇒ page 16. ■

Linking a connected mobile phone to the SEAT telephone system

When the telephone has been connected and the corresponding user profile created, your telephone will automatically link up with the SEAT telephone system under the following conditions:

- The mobile phone is switched on and the Bluetooth function activated.
- The vehicle system's Bluetooth visibility is on.



Note

The Bluetooth visibility of the vehicle system is switched on for three minutes when the ignition is switched on with the key. After three minutes, if you want to reactivate the visibility (for example while driving), you can do so with the voice control ⇒ page 16. ■

Making a call

Making, answering, rejecting or ending a call:

	Voice control	Multi-function control:
Dialling a contact from the address book	Follow the instructions given in the main menu	
Calling a number	Follow the instructions given in the menu Dial number	
Answering a call		Press button
Rejecting a call		Press button for at least 2 seconds.
Ending a call		Press button

Voice control

⇒ page 16, "Voice control: All models". ■

Voice control: All models

Dialogue

The voice control system can be activated via the “Push to Talk” or “PTT” key on the phone adapter or the button on the multifunction steering wheel.

In this manual, **Dialogue** is defined as the time in which the speech control system may receive vocal commands and provide assistance for completion of different functions in case the user is hesitant and unsure how to proceed. The system also responds by vocal messages.

If a call is received, then the dialogue is immediately interrupted.

The voice control system includes the options, **short dialogue** and **long dialogue**. The default setting is the long dialogue. The short dialogue is recommended when you are familiar with the orders and the structure of the voice control menu. The long dialogue offers more tips and information about the voice control procedure.

Note the following to ensure that you are properly understood:

- Speak in a normal tone and without pauses or exaggerated pronunciation.
- Avoid poor articulation of words.
- Keep the doors, windows and sun roof closed if possible to avoid background noises that might affect the system.
- Keep the air vents directed away from the microphone (located on the interior light).
- At high speeds, you might need to speak louder to drown out background noises.
- Avoid other noises in the vehicle during a dialogue (e.g. other passengers speaking in the vehicle).

- Avoid speaking when the system is saying a cue.
- The hands-free microphone is directed towards the driver, therefore, only the driver should try to operate the system.
- To make a call when there is heavy background noise we recommend using the speech controlled telephone book instead of speaking individual digits. This will help avoid mistakes when specifying telephone numbers. ■

Structure of the voice control system

The functions available in the Voice control system are as follows:

Dialling a contact			
Dialling a number			
Redial			
Other options	Address book	Read address book	Dial contact
			Record name of contact by voice
			Delete name of contact by voice
		Update address book	
	Settings	Long dialogue / Short dialogue	
		Bluetooth	Change PIN
			Activate visibility
		Restore factory settings	
	Record of calls	Incoming calls	
		Missed calls	
		Recent calls	


SEAT S.A. is permanently concerned about continuous development of its types and models. For this reason we ask you to understand, that at any given time, changes regarding shape, equipment and technique may take place on the car delivered. For this reason no right at all may derive based on the data, drawings and descriptions in this current handbook.

All texts, illustrations and standards in this handbook are based on the status of information at the time of printing. Except for error or omission, the information included in the current handbook is valid as of the date of closing print.

Re-printing, copying or translating, whether total or partial is not allowed unless SEAT allows it in written form.

SEAT reserves all rights in accordance with the "Copyright" Act.

All rights on changes are reserved.

 This paper has been manufactured using bleached non-chlorine cellulose.

© SEAT S.A. - Reprint: 15.02.10

Inglés 6J0012006AQ (02.10) (GT9)



6J0012006AQ

